

# Mi·Light<sup>®</sup>

 
## FUT095 RGBW remote control with buttons FUT096 Touch screen RGBW remote control

### Product Features


This manual describes two types of RGBW remote controls used for our RGBW product. Both of them have same functions but different design. Each remote control can control the led lights up to four different zones, change the color, dim/brighten the lights, warm/cool white, different programs. In this manual.

### Technical Parameters

Product Name: RGBW remote control with buttons  
Model No.: FUT095  
Voltage: 3V(AAA \* 2PCS)  
Transmission Frequency: 2.4GHz  
Modulation Method: GFSK  
Transmitting Power: 6dBm  
Standby Power Consumption: 20uA  
Control Distance: 30m  
Size: 52.5\*21\*120mm

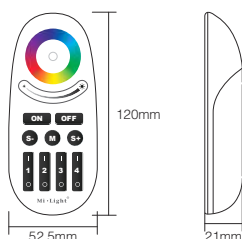

 
Product Name: Touch screen RGBW remote control  
Model No.: FUT096  
Voltage: 3V(AAA \* 2PCS)  
Transmission Frequency: 2.4GHz  
Modulation Method: GFSK  
Transmitting Power: 6dBm  
Standby Power Consumption: 20uA  
Control Distance: 30m  
Size: 52.5\*21\*120mm

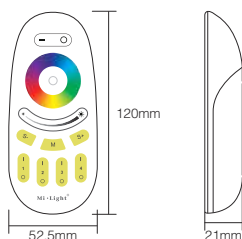


### Products Key Diagram

**Remark:** Hold "I" to get white mode. Under white mode, press 'S-' to get warm white, press 'S+' to get cool white. Under color mode, press 'S+/S-' for saturation control. When press 'M', S+/S- can adjust the speed of the dynamic modes.

 To dim all RGBW lights at once or change the color, first press "Master ON". to do this with individual lights, first press "Zone ON". secondly, choose the color or brightness according to the color ring or brightness ring.

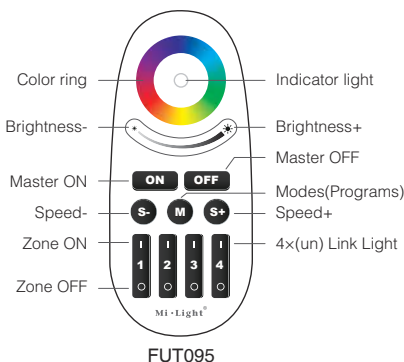

FUT095

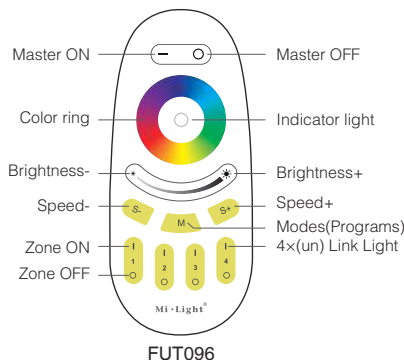 



FUT096


# Linking&Unlinking

 **Remark:** The light can be working after linking with the remote controller.


## Linking Instructions

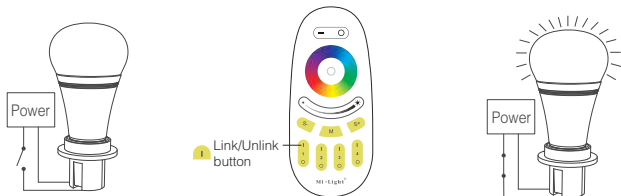


- 1 Switch off the light, after 10 seconds switch on again
- 2 When the light on, short press any zone of "  " 1 time within 3 seconds
- 3 The light blink 3 times slowly means the linking is done successfully.


 If the light not blink slowly, the linking failed, Pls switch off the light again, and follow the above steps again.

## Unlinking Instructions

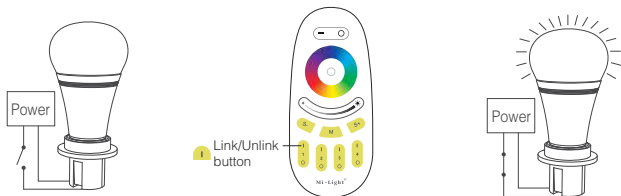 


- 1 Switch off the light, after 10 seconds switch on again
- 2 When the light on, long press "  " within 3 seconds
- 3 The light blinking 10 times quickly, means the unlinking successfully.

**Unlinking must be the same zone with the Linking**

  If the light not blink quickly, the unlink failed, pls switch off the light again, and follow the above steps to unlink again.

## Grouping of several lights

You can add an endless numbers of lights to a zone on the 4 channel remote by linking the lights to different zones. This way you are completely flexible in creating different group combinations. Below you can see some grouping examples.

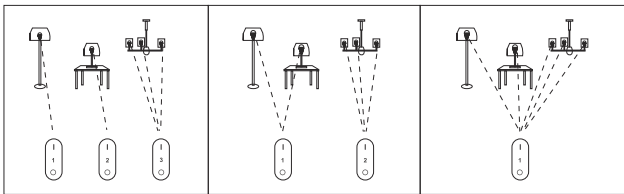

**Remark:**

1. The user can re-programme freely as needed. One remote can control countless lamps or controllers, but one lamp or controller can only be controlled by four remotes ( Max ).
2. Please check the battery installation and controller ( totally discharge the power ), when you programme after switching off and switching on.

## Attention

1. This remote controller only control specified Mi-Light products; not all Mi-Light series can work on this remote controller.
2. In the using of the remote, if the indicated lamp blinking quickly, pls change the battery in time. Pls don't use poor quality battery to avoid the leaking of battery liquid to damage the remote controller.
3. Please keep your finger off the touch ring when installing the batteries, to improve its sensitivity, and use the remote ( 3 seconds later ) after the batteries are installed. Please reinstall the batteries, if the fouch ring is found low-sensitivity.
4. This 2.4GHz remote control system is precise electronic product; don't use it in humid, high temperature, dust and high voltage environment; Saving it at indoor, dry and no static electricity environment.
5. Pls don't use the remote controller on the wide-range metal or strong electromagnetic wave area, otherwise, it will badly affect the controlling distance.



Made in China